مودم بیسیم DSL-2750 دی لینک با پشتیبانی از استانداردهای +ADSL2 و 4 پورت، یک دستگاه با بهره وری بالا، مناسب برای فضای خانگی و ادارات کوچک میباشد. سرعتی که این مدل مودم پوشش میدم تا 4 برابر بیشتر از مودم های با استاندارد 802.11g میباشد. با یکبار کانکت کردن مودم با کامپیوتر و دیگر دستگاه های موجود میتوانید بالاترین کارایی را در هرجایی از خانه و اداره ازین مودم شاهد باشید و از ارتباط خود با دنیای اینترنت لذت ببرید.

درصورتیکه میخواهید بیشتر راجع به این کالا و مشخصات آن بدانید میتوانید به صفحه DSL-2750U مراجعه کنید.

طريقه نصب مودم دی لينک 2750

برای وارد شدن به مراحل نصب مودم دی لینک dsl-2750u ابتدا باید آدرس آی پی مودم را در آدرس بار مرورگر خود وارد کنید و اینتر بزنید. (لازم به توضیح است آدرس آی پی مودم بصورت پیش فرض 192.168.1.1 میباشد)

را وارد کنید	آدرس آی یی		
Q Search the Web		\rightarrow	
TOP SITES V			
192.168.0.1 laniran	192.168.1.1 192.168.0.50	google dlinkmea	
🏷 HIGHLIGHTS ∨			
		And a second sec	ß
LANIRAN خرید روتر به سیم ته په لینک - مدل TL-WR940N -ایران شبکه	ACCUWEATHER Weather in Mashhad - AccuWeather Forecast for	DLINK DNR-2020-04P JustConnect 16-Channel PoE Network	
بررسې مشخصات و خرید روتر بی سیم تی پی لینک به همراه هدیه ، ضمانت اصالت	Razavi Khorasan Iran Mashhad weather forecast from	Video Recorder D-Link UK The DNR-2020-04P JustConnect 16-	
 Visited 	 Visited 	O Visited	



نام کاربری را admin و رمز عبور را نیز admin وارد کنید. (این مقادیر نیز بصورت پیش فرض میباشند. درصورتیکه از قبل رمز عبور را تغییر داده اید باید با آن مقدار وارد شوید. درصورتیکه رمز عبوری که از قبل تعریف کرده اید را به یاد ندارید نیاز هست دستگاه را ریست سخت افزاری کرده و با مقدار پیش فرض وارد شوید.)

③ 🔏 192.168.1.1/cgi-bin/webproc	💟 🏠	
Product Page: DSL-2750U Firmw	vare Version:ME_1.03	
D-Link		
LOGIN Input username and password Username : admin ج Password : مز عبور را وارد کنند Remember my login info. on this computer Login	4	
BROADBAND		

المحه تنظيمات دستگاه برای شما باز می شود. روی گزینه Setup Wizard کلیک کنید.

DSL-2750U	SETUP ADVANCED MANAGEMENT STATUS HELP
Wizard	SETTING UP YOUR INTERNET
Internet Setup	You can set up the Internet connection through either of the two ways: Web-based InternetConnection Setup Wizar Manual setup
Wireless	For manual setup, you need to have the connection settings provided by your ISP.
Local Network	INTERNET CONNECTION WIZARD
LAN IPv6	This wized assists you to quickly connect the new router to the Internet, through step-by-step instructions. Click the
Time and Date	button below to begin.
Logout	(Setup Wizard)
	Note: Before launching the wizard, please ensure that you have correctly followed the steps outlined in the Quick Installation Guide corresponds to the router.
BROADBAND	

2- در صفحه ای که باز می شود Next را بزنید.



3- در این صفحه می توانید منطقه ی زمانی خود را انتخاب کنید. (انجام این مرحله اختیاری است)

With the In this p configur TIME	e time configuration function, you can configure, update, and maintain the correct time of the internal system clock. age, you can set the time zone that you are in and set the network time protocol (NTP) server. You can also e daylight saving to automatically adjust the time if necessary.
St	Automatically synchronize with Internet time server Primary NTP time server: Manual setup time: 2012 Year 05 Mon 23 Day 00 Hour 05 Min 57 Sec
TIME	CONFIGURATION Time Zone: (GMT+05:30) Chennai, Kolkata, Mumbai, New Delhi 🔹
	Image: Constraint of the series of the se
	Back Next Cancel

4- در این مرحله نیاز هست نوع کانکشن خود را در قسمت Protocol انتخاب کنید. (اگر میخواهید بصورت اتومات کانکت شوید PPPoE را انتخاب کنید. اگر گزینه Bridge را انتخاب کنید نیاز هست برای اتصال به اینترنت کانکشن بسازید.)

VPI و VCI را مقدار دهید. (این مقدار از سمت شرکت سرویس دهنده اینترنت تعریف می شود که در اکثر شرکت ها بصورت VPI=0 و VCI=35 تعریف می شود. اگر از این مقدار مطمئن نیستید با شرکت سرویس دهنده ی اینترنت خود تماس بگیرید.)

در صورت انتخاب پروتکل PPPoE برای کانکت شدن بصورت اتومات نیاز هست مقدار Username و Password که از طرف شرکت سرویس دهنده (ISP) دراختیار شما قرار داده می شود را وارد کنید و در نهایت Next را بزنید.

STEP 2: SETUP INTERNET CONNECTION \rightarrow 3 \rightarrow 4 \rightarrow 5	
If you want to change WAN access type, you can click on "Ethernet" or "DSL".	
note : If you select the WAN access type is "Ethernet", Please send line to LAN4	port!
When search available PVC, according to different condition, need the time	is different!
WAN Access Type : O Ethernet O DSL	
Please select your ISP (Internet Service Provider) from the list below.	
Protocol : PPPoE 🥌 🖆	انتخاب يروتكل اتصال به اينترند
Encapsulation Mode: LLC	
VPI: 0 VCI: 35 (32-65535)	
Search Available PVC : Scan	
РРРОЕ РРРОА	
Please enter the user name and password provided by your Internet service pro case-sensitive. Click "Next" to continue.	wider (ISP). Note that the information is
Username :	نام کاریری را وارد کنید –
Username : Password :	نام کاریری را وارد کنید رمز عبور را وارد کنید

5- در مرحله بعد تنظیمات مربوط به وایرلس مودم dsl-2750u انجام می شود.

با برداشتن تیک گزینه Enable Your Wireless Network می توانید وایرلس دستگاه را غیر فعال کنید.



برای وایرلس مودم در قسمت Wireless Network Name(SSID) نام، و در قسمت Pre-Shared Key رمز عبور تعریف کنید.

در قسمت Visibility Status می توانید انتخاب کنید که وایرلس دستگاه قابل رؤیت برای دیگران باشد یا نه.

The wireless network is en	bled by default. You can des	5 select it to disable it and click "N	ext" to skip the configuration of
wireless network.	ble Your Wireless Network	غیرفعال کنید 🗕 🔽 : ۲	وايرلس را فعال/
For security concerns, it is wireless network that can	ighly recommended to chang e easily recognized by wirele	ge the pre-configured network i ss clients.	name. Please set a name for your
Win	less Network Name (SSID)	یں 🚽 D-Link	تعریف نام کاربری برای وایر
If you select "Visible", the s	SID of your wireless network	c can be found by wireless client	s. If you select "Invisible", your
wireless neework is modern	ind docio need co mandally e		ce co your wireless neework.
	Visibility Status	s: • Visible 🔿 Invisible 🔿	
In order to protect your ne following wireless network None	Visibility Status twork from hackers and unau ecurity settings.	s: Visible Invisible	ecommended to select one of the Best
In order to protect your ne following wireless network None None	Visibility Status twork from hackers and unau security settings.	s: Visible O Invisible uthorized users, you are highly re curity Level O WPA-PSK	ecommended to select one of the Best WPA2-PSK
In order to protect your ne following wireless network None None Security Mode:V Select this option	Visibility Status twork from hackers and unau security settings. © WEP VPA2-PSK if your wireless adapters sup	s: Visible Invisible uthorized users, you are highly re curity Level WPA-PSK port WPA2-PSK.	ecommended to select one of the Best WPA2-PSK
In order to protect your ne following wireless network None None Security Mode: Select this option Please enter your wireless	Visibility Status twork from hackers and unau security settings. WEP VPA2-PSK if your wireless adapters supp ecurity key:	s: Visible O Invisible uthorized users, you are highly re curity Level O WPA-PSK port WPA2-PSK.	ecommended to select one of the Best WPA2-PSK



6− در پنجره ای که باز می شود این امکان برای شما وجود دارد که رمز عبور ورود به صفحه ی تنظیمات مودم را تغییر دهید. در صورتیکه مایل به تغییر نیستید کلید Skip را بزنید.

D-Link	C	
STEP 4: /	ACCOUNT PASSWORD > 5	
Use the field	ds below to change or create passwords. Note: Password cannot contain a	space.
ACCOUNT	PASSWORD	
	Username: admin	
	Current Password:	
	New Password:	
	Confirm Password:	43
	Back Next Skip Cancel	

-7 در صفحه ی بعد گزارشی کلی از اطلاعات ورودی شما نمایش داده می شود. در صورت اطمینان از صحت اطلاعات Apply را بزنید در

غیراینصورت با استفاده از کلید Back به مراحل قبل بروید و اطلاعات را اصلاح کنید.

STEP 5: COMPLETED AND RESTART	
he setup is complete. Click "Back" to review or modify the s	ettings.
the Internet connection does not work, try the Setup Wiz you have the Internet connection details provided by your	ard again with alternative settings, or use manual setup insta ISP.
SETUP SUMMARY	
The following shows a detailed summary of your settings. P of paper, and save it, so you can correctly configure the se information in this page.	lease print this page out or write the information on a piece ttings on your wireless client adapters later based on the
Time Settings :	disable 😞
NTP Server 1 :	not set!
NTP Server 2 :	not set!
Time :	2012-05-23T00:05:57
Daylight Saving Time :	disable
wan_type	DSL
VPI / VCI :	0/35
Protocol :	PPPoE
Connection Type :	LLC
Username :	5111111
Password :	1234
Wireless Network Name (SSID) :	D-Link
Visibility Status :	visible
Encryption :	WPA2-PSK
Pre-Shared Key :	123456789
WEP Key :	not set!



• برای انجام تنظیمات جزئی تر وایرلس دستگاه وارد منوی Wireless از سربرگ SETUP شوید. دو زیر منوی Wireless

ل ملاحظه ميباشند.	Wireless قاب	Security	Basic
-------------------	--------------	----------	-------

Product Page: DSL-275	00			I	Firmware Version:ME_1.03	
D-Lini	K					
DSL-2750U	SETUP	ADVANCED	MANAGEMENT	STATUS	HELP	
Wizard	WIRELESS SETTING	S WIRELESS BASIC				
Internet Setup	Configure your wirele	ss basic settings.				
Wireless			Wireless Basic			
Local Network			Wireless busie			
LAN IPv6	WIRELESS SETTING	S WIRELESS SECURI	Y			
Time and Date	Configure your wirele	ss security settings.				5
Logout			Wireless Security			l
BROADBAND						
		Copyright @ 2013-2	015 D-Link Systems, Inc.			

در منوی Wireless Basic می توانید علاوه بر اطلاعات وارد شده از قبل، کانال وایرلس را در قسمت Wireless Channel بصورت دستی مقدار دهید و همچنین Band Width مودم را روی 40/20MHz بگذارید. (لازم به ذکر است کانال های 11-3-1 کانال های خلوت تری میباشند.)

D-Lini	K				
DSL-27500	SETUP	ADVANCED	MANAGEMENT	STATUS	HELP
Wizard	WIRELESS BASIC				
Internet Setup	Use this section to con need to be duplicated	figure the wireless setti	ngs for your router. Pleas	e note that changes mad	e in this section will also
Wireless					
Local Network	WIRELESS NETWOR	K SETTINGS			
LAN IPv6		Enable Wireless:	/		
Time and Date	Enable	MultiAP Isolation:			
Logout	Wireless Netv	vork Name (SSID) : D	-Link		NOTE:
		Visibility Status :	🖲 Visible 🔘 Invisible		16 Q. T.
		Country/Region : L	Jnited Arab Emirates	-	∎92665 I
		Control Sideband:	Jpper	▼	
		Wireless Channel 7	Auto Scan	▼	
		802.11 Mode: 8	802.110/g/n	•	
		Baild Widdh 2	10 M	<u> </u>	
	Remember your SSID a	s you will need to confi	gure the same settings o	n your wireless devices an	d PC.
			Apply Cancel		



در منوی Wireless Security می توانید بسته به نیاز خود نوع رمزگذاری وایرلس را انتخاب کنید.

Vizard Vizard Vizard Vireless	. Please note that change	es made in this page
ternet Setup In this page, you can configure the wireless security settings for the router. must also be duplicated to your wireless clients and PC. WIRELESS SECURITY MODE	. Please note that change	es made in this page
reless WIRELESS SECURITY MODE		
WIRELESS SECURITY MODE		
CALINEEWORK		
To protect your privacy, you can configure wireless security features. The	e device supports 3 wirele	ss security modes
including: WEP, WPA, and WPA2. WEP is the original wireless encryption in of security.	standard. WPA and WPA:	2 provide higher levels
ne and Date		
gout None None		
Remember your SSID and the security key as you will nee WEP	tings on your v	vireless devices and PC.
Ap Auto(WPA or WP	PA2)	
WPA2 only		

• برای تغییر آی پی این مودم میتوانید به منوی Local Network از سربرگ SETUP بروید و تنظیمات لازم را انجام دهید.

Wizard	LOCAL NETWORK							
Internet Setup	In this page, you can configure the local network settings of your router. Please note that settings in this page are optional and you need not change any of the settings in this page to get your network up and running.							
Wireless	and you need not change any or the	seconds in this page to get y	our network up and ranning.					
Local Network	ROUTER SETTINGS							
LAN IPv6	The IP address of the router configured in this page is the one you use to access the Web management interface. If you change the IP address in this page, you need to adjust the network settings of your PC to access the network.							
Time and Date	Router IP Address	192.168.1.1	وارد کردن آدرس آي يي جديد					
Logout	Subnet Mask	255.255.255.0						
	Domain Name	:						
	Configure the second IP Address and Subnet Mask for LAN							
	IP Address	:						
	Subnet Mask	:]					
	DHCP SETTINGS (OPTIONAL)							
		Enable DHCP Relay						
	Relay IP Address							
	In this page, you can configure the built-in DHCP server to assign IP addresses to the computers on your network.							
		Enable DHCP Server						
	DHCP IP Address Range	192.168.1.33	to 192.168.1.199					
	DHCP IP Mask	255.255.255.0						
	DHCP Router IP	192.168.1.1						
	DHCP Lease Time	43200	(seconds)					
	Use this section to configure the DHCP Server in lan and wlan port individual:							



• برای تعریف Port Forwarding از سربرگ ADVANCED بروید.



در سربرک ADVANCED صفحه تنظیمات dsl-2750u تنظیمات مربوط به MAC Filtering و PS Setting وجود دارد.

Product Page: DSL-27	1	Firmware Version:ME_1.03						
D-Link								
DSL-2750U	SETUP	ADVANCED	MANAGEMENT	STATUS	HELP			
Advanced Wireless	ADVANCED WIRELESS ADVANCED SETTINGS							
Port Forwarding	You can configure advanced features of the wireless LAN interface.							
DMZ	Advanced Settings							
SAMBA								
3G Configuration	ADVANCED WIRELESS MAC FILTERING							
Parental Control	You can configure wireless firewall by denying or allowing designated MAC addresses.							
Filtering Options	MAC Filtering							
QoS Configuration								
Firewall Settings	ADVANCED WIRELESS SECURITY SETTINGS							
DNS	You can configure security features of the wireless LAN interface.							
Dynamic DNS	Security Sattings							
Network Tools			Security Security					
Routing	ADVANCED WIRELESS WPS SETTING							
Schedules	You can configure th	e wireless WPS.						
NAT			WPS Setting					
FTPD Setting			Wr 5 Setting					

