DSL-2520U یکی از مدل مودم های مقرون به صرفه شرکت دی لینک می باشد که تمامی ویژگیهای لازم برای برقراری یک شبکه امن و پرسرعت کابلی را دارد. این مودم از تمامی استانداردهای +ADSL, ADSL2, ADSL2, پشتیبانی میکند؛ و همچنین قابلیت هایی مثل QOS، استاندارد Firewall و Firewall داخلی و چندین ویژگی دیگر را دارا می باشد. مودم 2520U دی لینک به پورت USB مجهز شده است که می توان از این پورت برای اتصال یک دستگاه به مودم استفاده کرد. در صورتیکه مایل هستید بیشتر راجع به این محصول و کاربری های آن بدانید به صفحه محصول <u>DSL-2520U</u> مراجعه کنید.

## طريقه راه اندازي مودم 2520U

برای شروع پروسه نصب مودم نیاز هست آدرس آی پی مودم که بصورت پیش فرض 192.168.1.1 میباشد را در آدرس بار صفحه مرورگر خود تایپ کنید و اینتر بزنید.

Q Search the Web		$\rightarrow$	
TOP SITES Y			
laniran google	192.168.1.1 dlinkmea	ebanking.bank bankmellat	
\$⇔ HIGHLIGHTS ~		0	
		Clore	
- E			
LANIRAN	DLINK	NEWEGG	
خرید ذخیره کننده تحت شبکه 9 کاناله با 2 محفظه صرفا بر ای	DNR-2020-04P JustConnect 16-Channel PoE Network	D-Link DNR-202L mydlink Camera Video Recorder -	
	Video Recorder   D-Link UK	Newegg.com	

در صفحه ای که باز می شود نام کاربری و رمز عبور ورود به صفحه تنظیمات مودم را وارد کنید. (مقدار نام کاربری در حالت پیش فرض admin و مقدار رمز عبور نیز admin میباشد)

2 6		
Authentication Required		22
laniran	92:168.11 is requesting your username and password پوزرائیم ورود به مودم را وارد کلید رمز عبور را وارد کلید OK Cancel	The site says: "DSL-2520U_Z2" kmellat
1 X X X X X X X X X X X X X X X X X X X	DUTNE	NEWEGG

ا- برای شروع مراحل تنظیم مودم گزینه setup wizard را بزنید. امکان وارد کردن مقادیر در صفحه ای که باز شده است نیز وجود
 دارد. اما با زدن گزینه setup wizard می توانید مرحله به مرحله پروسه نصب را انجام دهید)

D-Link DSL-25200 SETUP ADVANCED MAINTENANCE STATUS HELP	
DSL-2520U SETUP ADVANCED MAINTENANCE STATUS HELP	
ADSL Setup ADSL SETUP Helpful Hints	
LAN Setup       If you are configuring this device for the first time, D-Link recommends that you click the Setup Wizard button, and follow the instructions on screen. If you wish to modify or configure the ADSL settings manually, tick       First time users a recommended to Setup Wizard. Click the Setup Wizard. Click the ADSL connection Setup.         Longvit       Longvit       First time users a recommended to Setup Wizard. Click the ADSL settings manually, tick	are orun the lick the itton and
Vol Winde gudeet Vol Winde gudeet Setup Wizard V Manual Setup WAN CONNECTION Vol Wanual Setup Vol Winde gudeet Setup Wizard V Manual Setup Vol Wizard V Manual Setup Vol Winde gudeet Setup Vizard V Manual Setup Vol Wizard V Manual Setup	e step by process ur ADSL
Reboot       The DSL WAN connection can be separated virtually into multiple channels by assigning different VPI/VCI in each Permanent Virtual Circuit (PVC). In each PVC you can also set the connection protocol to be PPP, Dynamic IP, Static IP or Bridge mode.       Hoc the Wanua or an advanced user an advanced user an the settings for y Internet Service (ISP) available.         WAN connection :       PVC0	actup more and have your Provider
CONNECTION IP VERSION Please take care entering your use and password as The DSL WAN connection can be Ipv4, IPv6 or IPv4/IPv6 mixed mode. IP Version :  IP Version :  IP v4 IPv4 IPv6 IPv6 IPv6 IPv6 IPv6 IPv6 IPv6 IPv6 IPv6	when ername s these ve. The ection ed by me or
MANUAL ADSL CONNECTION SETUP     password combin       Please select the appropriate option to connect to your ISP.     More	nations.
PPPoE/PPPoA     Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)	

## 2- گزینه Next را بزنید.



3- در این صفحه می توانید درصورت تمایل پسورد ورود به صفحه تنظیمات مودم را تغییر دهید. درصورتیکه مایل به انجام اینکار نیستید

وارد مرحله بعد شويد.	، را بزنيد تا و	گزینه Skip	مي توانيد
----------------------	-----------------	------------	-----------

D-Linck         Ds. 25200       SETUP       ADVANCED       MAINTENANCE       STATUS       HEIP         ADSL Setup       Image: Control of this router is 'admin'. To help secure your network, D-Link recommends that you should choose a new password of this router is 'admin'. To help secure your network, D-Link recommends that you should choose a new password of this router. Sit you do not wish to choose a new password now, just click Skip to continue. Click Next to proceed to next step.         Logot       Current Password:       Image: Continue Click Next to proceed to next step.         Rew Password:       Image: Continue Click Next to proceed to next step.       Image: Continue Click Next to proceed to next step.         Rew Password:       Image: Continue Click Next to proceed to next step.       Image: Continue Click Next to proceed to next step.         Rew Password:       Image: Continue Click Next to proceed to next step.       Image: Continue Click Next to proceed to next step.         Rew Password:       Image: Continue Click Next to proceed to next step.       Image: Continue Click Next to proceed to next step.         Rew Password:       Image: Continue Click Next to proceed to next step.       Image: Continue Click Next to proceed to next step.         Rew Password:       Image: Continue Click Next to proceed to next step.       Image: Continue Click Next to proceed to next step.         Rew Next:       Skip: Cance       Image: Continue Click Next to proceed to next step.       Image: Continue Click Next to prot	Product: DSL-2520U_Z2				Firmware Version: v	1.00 Hardware Version: B1
DSL-25207       SETUP       ADVANCED       MAINTENANCE       STATUS       HELP         ADSL Setup       ADSL Setup       STEP 1: CHANGE YOUR PASSWORD       Image: Change of this router is 'admin. To help secure your network, D-Link recommends that you should choose a new password between 1 and 15 characters. If you do not wish to choose a new password now, just click Skip to continue. Click Next to proceed to next step.       Image: Current Password is in the password between 1 and 15 characters. If you do not wish to choose a new password now, just click Skip to continue. Click Next to proceed to next step.         Corrent Password :       Image: Confirm Password :	D-Lini	ĸ				$\prec$
ADSL Setup         LAN Setup         Time and Date         Logout         Cogout         Current Password :         Lox Setup (offine confirm Password)         Reboot	D5L-2520U	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
LAN Setup         Tree and Date         Logout         Tote Criffine         Reboot    The factory default password of this router is 'admin'. To help secure your network, D-Link recommends that you should choose a new password between 1 and 15 characters. If you do not wish to choose a new password now, just click Skip to continue. Click Next to proceed to next step.          Current Password : <ul> <li></li></ul>	ADSL Setup	STEP 1: CHANGE	YOUR PASSWORD			
	LAN Setup Time and Date Logout Internet Offline Reboot	The factory default pass you should choose a new password now, just click	word of this router is 'admin'. password between 1 and 15 Skip to continue. Click Next to Current Password : New Password : Confirm Password : Back Next	To help secure your network, I characters. If you do not wish proceed to next step.	O-Link recommends that to choose a new من عبور قطی را وارد کنید ور جدید را وارد کنید تکران رمز عبور	رمز عبر



-4 حالا وارد مرحله ای شده اید که نیاز به انتخاب کشور و پس از آن انتخاب سرویس دهنده اینترنت خود دارید. اگر شرکت سرویس دهنده مخابرات میباشد گزینه IRAN TCT ، شرکت آسیاتکAsiatech ، شرکت صبانت Sabanet و ... را انتخاب کنید.

مقدار VPI و VCI برای اکثر شرکت های ارائه دهنده اینترنت (ISP) بصورت VPI=0 و VCI=35 می باشد. در صورتیکه از این مقدار مطمئن نیستید بهتر است با شرکت ارائه دهنده سرویس تماس بگیرید.

گزینه بعدی Connection type میباشد که اگر میخواهید در هنگام روشن شدن مودم بصورت اتوماتیک به اینترنت وصل شوید باید گزینه PPPoE LLC و اگر میخواهید برای وارد شدن به اینترنت از کانکشن استفاده کنید گزینه Bridge را انتخاب کنید.

051-25200	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
DSL Setup	STEP 2: SELECT IN	TERNET CONNECTION	ТҮРЕ		
AN Setup	Please select your Country	/ and ISP (Internet Service Pr	ovider) from the list below. It	f your Country or ISP is	
ime and Date	not in the list, please selec	t "Other".		التخاريكتين	
ogout		Country :	Iran 🗸		1.01
Internet		ISP Provider :	IRAN TCT	سرکت سرویس دهنده	
Offline		VPI:	35		
Reboot		Connection Type :		زینه بر ای اتصال بصور ت اتوما	ۍ انتخاب اين گ
		Back Nex	t Cancel		
4					

بعد از انتخاب گزینه های مربوطه کلید Next را بزنید تا وارد مرحله ی بعد برای نصب مودم شوید.



5- در این صفحه Username و Password خط اینترنت که شرکت سرویس دهنده در اختیار شما قرار داده است را وارد کنید.



6- در صورتیکه از صحت اطلاعات وارد شده اطمینان دارید گزینه Finish و در غیر اینصورت برای اصلاح اطلاعات Back را بزنید.



-7 چنانچه تمایل به تغییر آدرس آی پی دستگاه دارید میتوانید از منوی سمت چپ گزینه LAN Setup را بزنید. و گزینه
 -7 مقدار داده و Apply کنید.

(توجه داشته باشید که درصورت تغییر آی پی مودم از صفحه تنظیمات مودم خارج می شوید و باید مجدد با آدرس آی پی جدید وارد شوید)

D5L-2520U	SETUP	ADVANC	ED I	<b>1AINTENANCE</b>	STATUS	HELP
ADSL Setup	LAN SETUP					Helpful Hints
LAN Setup Time and Date	This section allows you optional and you shoul	to configure the loca d not need to change	al network setting: any of the settin	of your router. Plea gs here to get your r	se note that this section i network up and running.	S If you already have a DHCP server on your network or are using
Logout	ROUTER SETTIN	GS				the devices on your
Internet Offline Reboot	Use this section to con is the IP Address that here, you may need to	figure the local netwo you use to access the adjust your PC's net	ork settings of you e Web-based man twork settings to a	r router. The IP Add agement interface. I access the network a	ress that is configured he f you change the IP Addre gain.	re DHCP Server to disable DHCP Server to disable this feature. ess If you have devices on your network that should
	Ro	outer IP Address :	192.168.1.1	ں ہی جدید 🗕	وارد کردن مقدار آی	always have fixed IP
		Subnet Mask :	255.255.255.0			DHCP for each such
		Alias IP Address :	0.0.0.0			aevice.
	Alias	IP Subnet Mask :	0.0.0.0			More
	DHCP SERVER S Use this section to con network.	GETTINGS (OPT)	<b>IONAL)</b> CP Server to assi <u>o</u>	n IP addresses to th	e computers on your	
	Ena	ble DHCP Server :	<b>V</b>			
	DHCP IF	Address Range :	192.168.1.2	to 19	2.168.1.33	
	D	HCP Lease Time :	259200	(seconds)		
	DHCP TABLE					
	Host Name I	P Address	1	1AC Address	Statu	5
	192	. 168. 1.2 👻		Manual	Config 👻 Static	- I I I I I I I I I I I I I I I I I I I
		_				
	RADVD					

