


روتر DIR-600 دی لینک با قابلیت نصب بسیار آسان برای شما این امکان را فراهم می‌آورد تا بتوانید اینترنت را بین چندین کامپیوتر در فضای خانه خود به اشتراک بگذارید. تحت شبکه خانگی ایجاد شده همچنین می‌توانید فایل‌های خود مثل عکس، موزیک و اسناد و ... را برای دیگر کامپیوترهای موجود در شبکه ارسال کنید. این روتر با داشتن 4 پورت اترنت 10/100 از تکنولوژی وایرلس سری N پیروی کرده و سرعت بیسیم آن تا 150 مگابیت بر ثانیه می‌رسد.


چنانچه مایل هستید بیشتر راجع به این محصول دی لینک و ویژگی‌های آن بدانید به صفحه [DIR-600](#) مراجعه نمایید.

نصب و راه اندازی روتر DIR-600


برای نصب این دستگاه ابتدا آدرس آی پی آن که بصورت پیش فرض 192.168.0.1 میباشد را در آدرس بار مرورگر خود وارد کنید و اینتر بزنید. (چنانچه موفق نشدید با این آدرس آی پی وارد شوید، دستگاه خود را از طریق دکمه reset پشت روتر ریست کنید تا به تنظیمات اولیه کارخانه برگردد و مجدد تلاش کنید.)

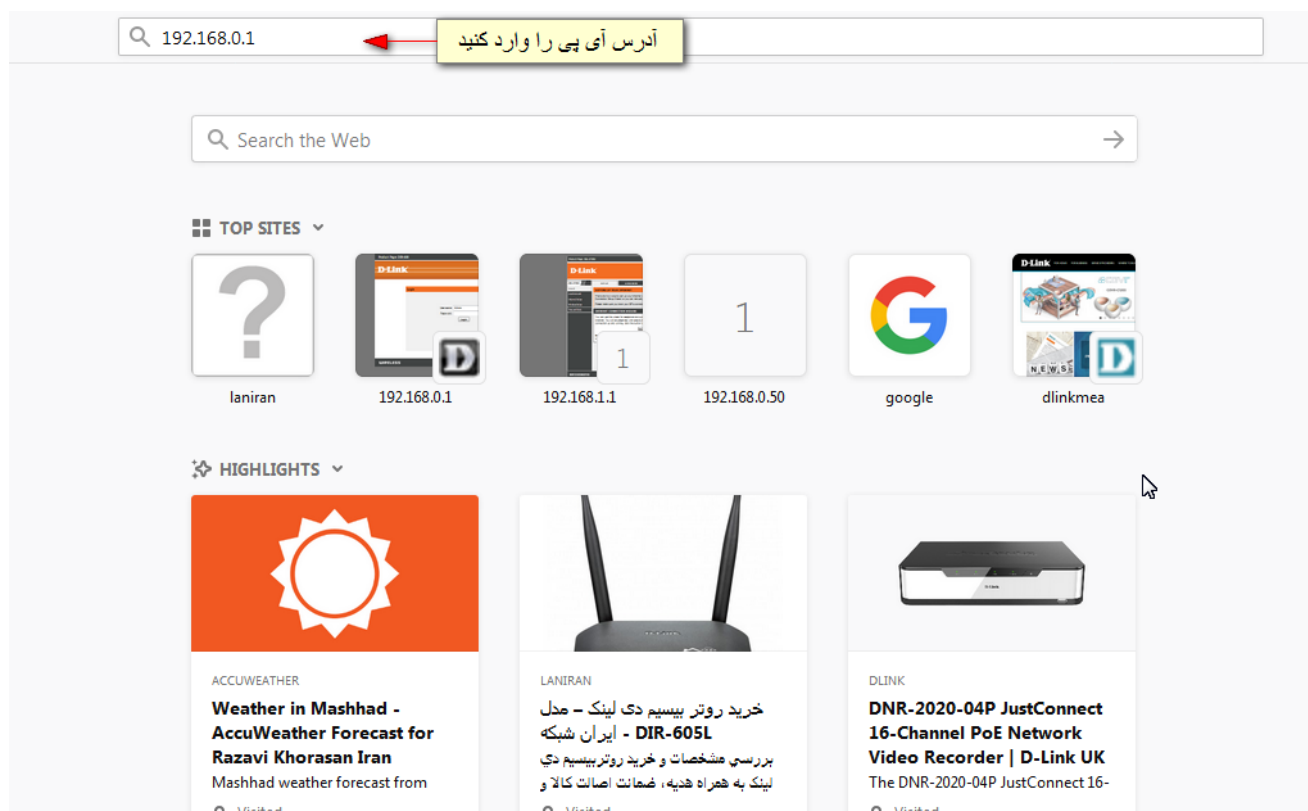

مقدار نام کاربری را admin وارد کنید و رمز عبور را خالی بگذارید. (اگر قبلا این مقادیر را تغییر داده اید میبایست با نام کاربری و رمز عبوری که از قبل تعریف کرده اید وارد شوید و اگر به یاد نمی آورید دستگاه را ریست کرده و با مقادیر پیش فرض وارد شوید).

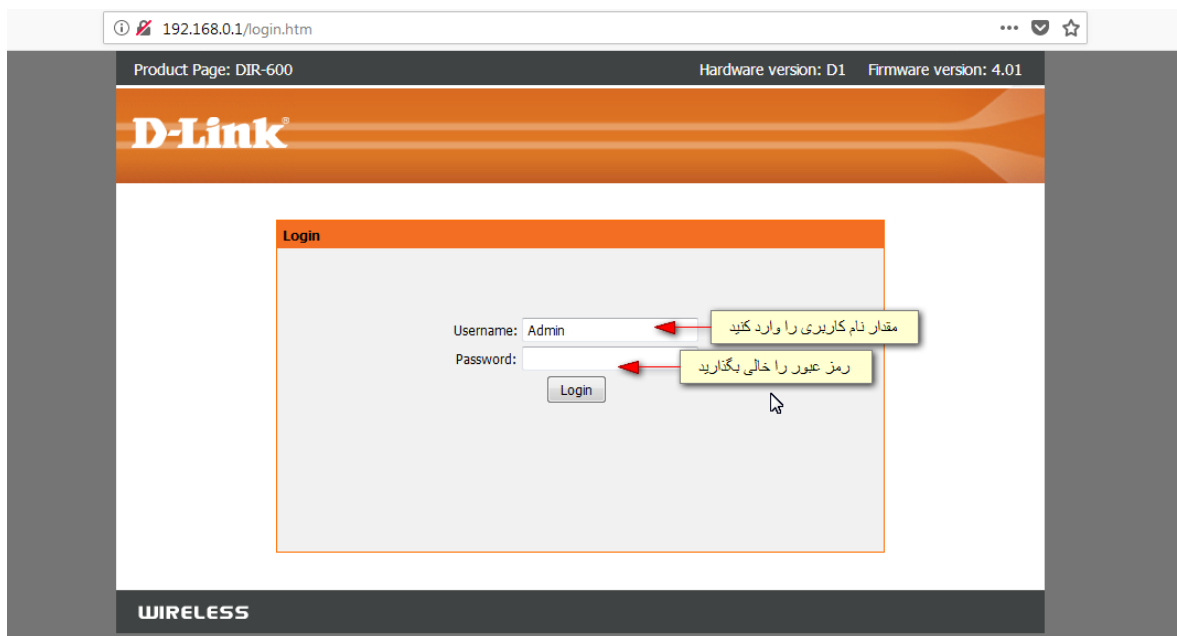

- برای شروع تنظیم روتر dir-600 از سربرگ Wireless منوی Wireless Basics را کلیک کنید. نام وایرلس و رمز عبور تعریف کنید، نوع رمزگذاری را در قسمت Security Options انتخاب کنید و وایرلس روتر را از دید دیگران مخفی کنید.

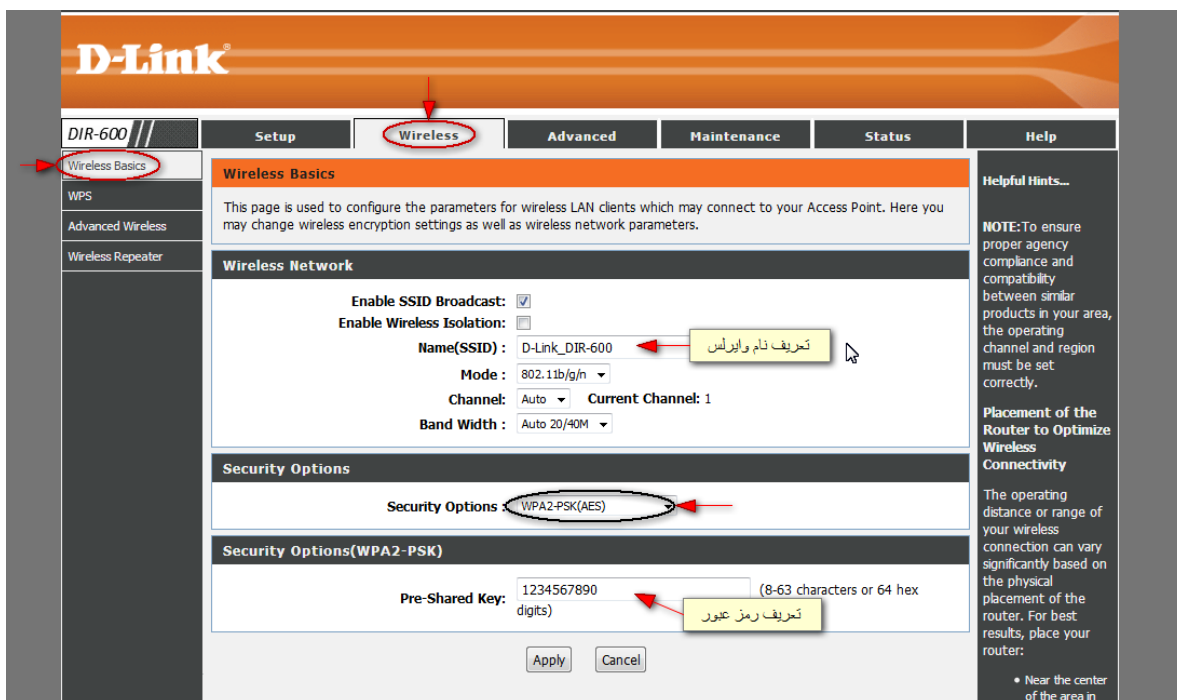

در سربرگ Wireless منوی Advanced Wireless می توانید وایرلس روتر و همچنین WPS را فعال/غیرفعال کنید.

D-Link

DIR-600 // Setup Wireless Advanced Maintenance Status Help

Wireless Basics
WPS
Advanced Wireless
Wireless Repeater

Advanced Wireless Settings

This page helps you to setup advanced wireless features, include Fragment Threshold etc.

Advanced Wireless Settings

Enable Wireless : ☒ فعال/غیرفعال کردن وایرلس

Fragment Threshold(256-2346) : 2346

RTS Threshold(1-2347) : 2347

Preamble Type : Short Preamble

Radio Power (Percent) : 100%

HT20/40 Coexistence : ☒ Enabled ☐ Disabled

WPS Setup

PIN of the router : 21871351

Enable WPS : ☒

Disable PIN : ☐

Keep current configuration : ☒

Access Control List

ACL Setup

Apply Changes

Helpful Hints...

By default these options need not be changed for this router to operate with Wireless.

More...

اگر میخواهید از این روتر بعنوان repeater استفاده کنید از سربرگ Wireless منوی Wireless Repeater را انتخاب کنید.

Product Page: DIR-600 Hardware version:D1 Firmware version: 4.01

D-Link

DIR-600 // Setup Wireless Advanced Maintenance Status Help

Wireless Basics
WPS
Advanced Wireless
Wireless Repeater

Wireless Repeater

This page is used to configure the parameters for wireless repeater.

Step 1: click "Site Survey". Sites surveyed will be displayed in the list below. Select one item, and click "Next".

Wireless Repeater Setup

Repeater Enabled ☒ اگر میخواهید بعنوان ریپیتر استفاده کنید تیک کنید

SSID of AP

Site Survey

Apply

Helpful Hints...

This mode have a bridge function. Wireless repeater can be used to expand the coverage of the wireless signal. You can scan and connect the network to expand the wireless signal coverage in this page.

More...



این امکان وجود دارد که تنظیمات مربوط به راه اندازی اینترنت روی پورت WAN انجام گیرد. به منوی Internet Setup از سربرگ SETUP بروید و WAN Access Type را روی PPPoE قرار دهید. اطلاعات مربوط به اینترنت را وارد کرده و Apply کنید.

D-Link

DIR-600

Setup | Wireless | Advanced | Maintenance | Status | Help

Wizard
Local Network
Internet Setup

WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP or PPPoE by click the item value of WAN Access type.

WAN Interface

WAN Access Type: **PPPoE**
 Host Name: Static IP
 MTU Size: DHCP Client
 Attain DNS Automatically: ☒ (for the connection of your PC if DNS configuration changed.)
 Set DNS Manually: ☐
 DNS Server 1: 0.0.0.0
 DNS Server 2: 0.0.0.0 (Optional)

MAC Clone

Default MAC ☒
 MAC from PC ☐
 MAC manual ☐
 9C:D6:43:41:2E:84

Apply Changes Reset

Helpful Hints...

When configuring the router to access the Internet, be sure to choose the correct Access Type from the list below.

Please take care when entering your Access Name and Password as these are case sensitive. The majority of connection issues are caused by incorrect Access Name or Password combinations.

More...

برای تغییر آدرس آی پی روتر dir-600 کفایت به منوی Local Network از سربرگ SETUP بروید و مقدار آی پی جدید را وارد و Apply Changes را بزنید. (در این صورت از صفحه تنظیمات خارج می شوید و میتوانید با آدرس آی پی جدید دوباره وارد شوید).

Product Page: DIR-600 Hardware version:D1 Firmware version: 4.01

D-Link

DIR-600

Setup | Wireless | Advanced | Maintenance | Status | Help

Wizard
Local Network
Internet Setup

LAN Interface Setup

This page is used to configure the LAN interface of your Wireless Router. Here you may change the setting for IP address, subnet mask, etc..

This page can be used to config the DHCP mode:None or DHCP Server.

(1)Enable the DHCP Server if you are using this device as a DHCP server. This page lists the IP address pools available to hosts on your LAN. The device distributes numbers in the pool to hosts on your network as they request Internet access. If you choose "None", then the router will do nothing when the hosts request a IP address.

(2)This page lists the fixed IP/MAC address on your LAN. The device distributes the number configured to hosts on your network as they request Internet access.

LAN Interface Setup

IP Address: 192.168.0.1
 Subnet Mask: 255.255.255.0

Apply Changes

DHCP Server Settings

DHCP Mode: DHCP Server

Helpful Hints...

The IP address of your router is the same IP address you will use to access the web management interface of your router.

If you already have a DHCP server on your network or are using static IP addresses on all the devices on your network, select DHCP Mode **None** to disable this feature.

If you have devices on your network that should always have fixed IP addresses, add a Static DHCP for each such device.

More...

